



Quantum[®] Openers

Installation Instructions and Owner's Manual Supplement

Wayne-Dalton Corp.
P.O. Box 67 Mt. Hope, OH 44660
(888) 827-3667
www.wayne-dalton.com

Use this supplement in conjunction with the main Installation Instructions and Owner's Manual. These instructions replace the corresponding steps of the Quantum[®] opener main Installation Instructions and Owner's Manual.

- 1) Wall Station Activation (Step 20 on page 14) is no longer required;** continue with Step 20 (Programming Wall Station to Power Head Unit) in the main Installation Instructions and Owner's Manual.
- 2) Transmitter Activation (Step 23 on page 16) is no longer required;** continue with Step 23 on page 17 (Changing the Transmitter Code) in the main Installation Instructions and Owner's Manual.
- 3) The Program Button now requires you to press and hold for five (5) seconds to initiate.**
 - Replace page 25 (How To Operate The Wireless Wallstation) with page 2 (Operating The Wireless Wallstation) of this supplement.



Operating the Wireless Wall Station

⚠️ WARNING

TO PREVENT POSSIBLE INJURY, NEVER LET CHILDREN OPERATE OR PLAY WITH DOOR CONTROLS. KEEP REMOTE CONTROL AWAY FROM CHILDREN.

Up-Down Button:

Momentarily pressing the Up/Down button starts or stops door movement or changes door's direction. Press and hold Up/Down button during the door's complete downward travel to override photo eye safety sensors or the internal secondary entrapment if photo sensors not required. **The up/down button (when unit is closed) can be activated by pressing flip cover.**

⚠️ WARNING

THE SEVERE OUT-OF-BALANCE CONDITION MUST BE CORRECTED IMMEDIATELY. FAILURE TO MAKE ADJUSTMENTS/REPAIRS, COULD RESULT IN SEVERE OR FATAL INJURY.

Light Button:

Momentarily pressing the light button turns on the light fixture. The light will remain on until either the light button is pressed again or the door is activated. The light automatically turns on with a door activation and remains on for four minutes thereafter. Pressing the light button before the four minutes has elapsed will turn off the light fixture. While the door is in motion, the Light button functions identical to the Up/Down button, stopping or reversing the door immediately.

Timer Button:

Momentarily pressing the timer button causes a delayed activation of a stationary fully open door. The light fixture or the opener's lamp will blink on and off for about 10 seconds prior to closing the door, allowing enough time to exit the garage when the opener is in the timer mode. Pressing any button, except the Program button while the opener lamp is blinking cancels the timer mode.

NOTE: The timer feature will only function with the door in the full open position. Pressing the timer button with a stationary door in any other position will cause the opener lamp to blink four times and the door will not be activated.

While the door is in motion, the timer button functions identical to the Up/Down button, stopping or reversing the door immediately.

Pet Position:

Pressing the pet button opens a closed door to a preset position between eight and thirty inches above the floor, allowing pets to enter and exit the garage without the door being fully open. The door must be fully closed to activate the pet open feature. Pressing the pet button with a stationary door in the pet open position will cause the door to close. Pressing the Up/Down button while the door is in the pet position will cause the door to open. While the door is in motion, the pet button functions identically to the Up/Down button, stopping or reversing the door immediately. The pet feature allows for custom setting of the pet position door height.

NOTICE: A door in the "pet position" (open 8-30 inches) is not locked and should not be considered to be in a secured door position.

Program Button:

The wall station program button has several functions.
a. It can be used to set a custom pet position. (see below)
b. It can be used to set the opener's closing force (see Adjustment #1 Page 21).

To set a custom pet position, start with the door in the closed position.
1. operate the door then stop it at the desired height. If desired height is not achieved, the door must be returned to the closed position.

2. **Press and hold the program button for five (5) seconds**, or the opener power head program switch button two times. The status light on the power head unit and the overhead light will flash on and off at a normal rate.
3. Press the pet button. The status light on the power head and the overhead light will flash on and off three times indicating successful programming.

The slide switch has two positions: Normal, and Door lock (Disable RF).

Normal position:

Move the slide switch to normal position for all normal functions of the opener. The normal position will cancel the door lock feature.

NOTE: Keep the slide switch in the normal position unless you have fully read and understood the door lock setting and you desire to use this setting.

Door Lock position:

If the door is stopped (fully open, fully closed or partially open) move the slide switch to the door lock position to suspend all normal functions of the opener. The opener will remain completely disabled and non-operational in this mode. All wall stations, transmitters and keyless entry units are ignored until the slide switch is moved to the normal position.

If the door is moving when the slide switch is moved to the door lock position, the door lock mode is not activated and all functions of the opener remain active.

Backlit LED Lights:

The Up/Down button backlit red LEDs blink intermittently to help you locate the wall station in a dark garage. This blink rate can be changed for longer battery life or can be turned off. The default blink rate is one blink every two seconds. For longer battery life the blink rate can be changed to blink once every four seconds. To change the blink rate, remove the battery cover and remove one battery. Re-install the battery and within 2 seconds, press the light button. Re-install the battery cover.

For longest battery life, the blink can be turned off. To turn off the blink, remove the battery cover and remove one battery. Re-install the battery and within 2 seconds, press the pet button. Re-install the battery cover.

NOTE: The wall station's arrow LEDs will light while any wall station button remains pressed.

