



Wayne-Dalton Corp.  
P.O. Box 67 Mt. Hope, OH 44660  
(888) 827-3667  
www.wayne-dalton.com

# iDrive® for Torquemaster®

## Installation Instructions and Owner's Manual Supplement

Use this supplement in conjunction with the main Installation Instructions and Owner's Manual. These instructions replace the corresponding pages/ steps of the iDrive® for Torquemaster® Installation Instructions and Owner's Manual.

**NOTE:** It is no longer necessary to program the Wall station or Transmitter(s) to the opener. The Wall station and Transmitter(s) are now programmed to the opener at the factory.

**iDrive® for Torquemaster®- P/N: 320687 Rev.4 12/18/2006**

- 1) Step 24 on Page 29 (Programming Wall Station)** is no longer required; continue with Step 25 (Programming Light Fixture) in the main Installation Instructions and Owner's Manual.
- 2) Step 32 on page 35 (Programming Transmitter)** is no longer required; continue with page 36 (Important Safety Instructions) in the main Installation Instructions and Owner's Manual.