



Wayne-Dalton Corp.  
 P.O. Box 67 Mt. Hope, OH 44660  
 (888) 827-3667  
 www.wayne-dalton.com



## Supplemental Installation Instructions

Use this insert in conjunction with the Installation Instructions and Owners Manual provided with the opener. This supplemental instructions insert replaces page 30 of the i drive for Torsion Springs Installation Instructions and Owners Manual.

### Maintenance:


#### Monthly Maintenance:

1. With door fully closed, manually operate the door with the emergency disconnect in the manual door operated position. If the door feels unbalanced or binds, have a qualified service person repair or make adjustments to the door.
2. Perform the contact/obstruction tests. See **Step 21 & 22** for the contact/obstruction test instructions. Inability to activate a door using the transmitter or wall station may be caused by a weak or dead battery. Press and hold the activation button on either the transmitter or the wall station. If the LED does not light, this is an indication that the battery is weak or dead. Replace the battery.

**NOTE:** Dispose of dead batteries properly.

#### **Battery replacement:**

Insert a coin in the coin slot of the transmitter or wall station and twist coin to access the dead battery. Replace the battery, being careful to match the positive (+) symbols on the circuit boards with the battery.

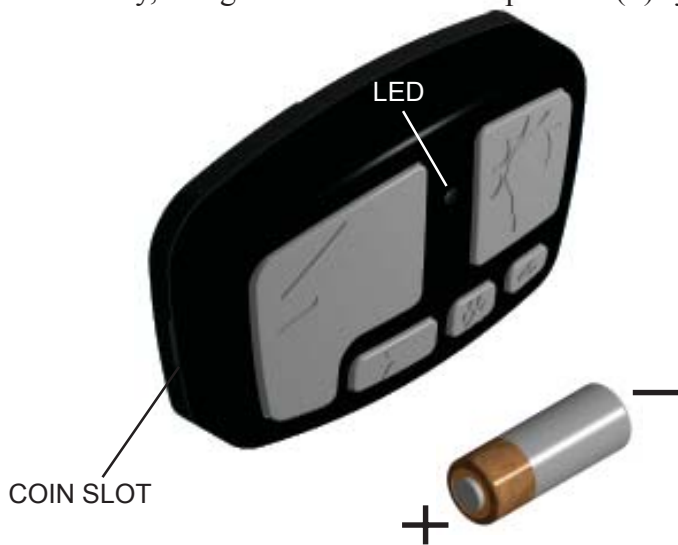

**NOTE:** Use only MN21 or equivalent 12-volt batteries.



**NOTE:** Some transmitters use two CR2016 or equivalent batteries while others use a single MN21 or equivalent battery.