




FASTENER SELECTION GUIDE

Fastener selection is determined by the thickness of the exterior trim or finish plus the sheathing plus the fastener penetration. The length of the fastener is measured from below the washer to the tip of the thread. If in doubt, use the longer fastener. Follow the fastener manufacturer's instructions to secure the fastener properly.

1	IDENTIFY YOUR HOME'S CONSTRUCTION									
	<i>Minimum Fastener Penetration</i>	Wood 1-1/2"	Concrete 1-3/4"	Hollow Block 1-1/4"	Wood 1-7/8"	Concrete 2"	Hollow Block 1-1/4"	Wood 1-7/8"	Concrete 2"	Hollow Block 1-1/4"

2	SELECT FASTENER			
		1/4" Tapcon SG	1/4" Panelmate PRO	1/4" Panelmate TVAS

3	DETERMINE APPROPRIATE FASTENER LENGTH										
	Exterior Finish	Vinyl or Aluminum (vertical or horizontal)	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	-----	-----	-----
		Wood or Cementitious Siding (vertical or horizontal)	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	2-3/4" to 3-1/4"	-----	-----	-----
		Stucco	2-1/4" to 3-1/4"	2-1/4" or 2-3/4"	2-1/4" or 2-3/4"	2-1/4" or 2-3/4"	2-1/4" to 3-1/4"	2-1/4" or 2-3/4"	-----	-----	-----
		Brick	-----	-----	-----	-----	-----	-----	7-3/8"	7-3/8"	7-3/8"

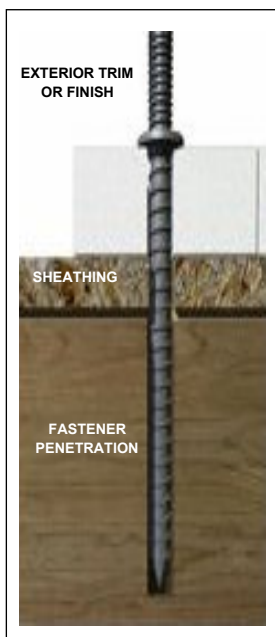

FASTENERS ARE LOCATED BY THE STEEL PANEL DISPLAY