

Supplemental Instructions FOR FASTENING THE OUTSIDE HANDLE

Wayne Dalton, a division of Overhead Door Corporation
P.O. Box 67 Mt. Hope, OH 44660
www.Wayne-Dalton.com


Use these instructions in conjunction with the installation instructions provided with the lock

NOTE: For (8000 Series Doors Only), if the described holes are 3/16" Dia., use the supplied phillips head machine screws to attach the outside handle. If the described holes are 3/4" Dia., use the supplied escutcheon fasteners to secure the outside handle, as shown in the installation instructions manual.

All 9000 Series & Wood Doors, See Step 3.

(2) Foam tape
(9100/9600/9900)
3/4" x 2-1/2" #306653
NOTE: Foam tape replaces
(4) #8 -1/2" screws

Universal Lock stile
(9100/9600 & 9900)
#261964

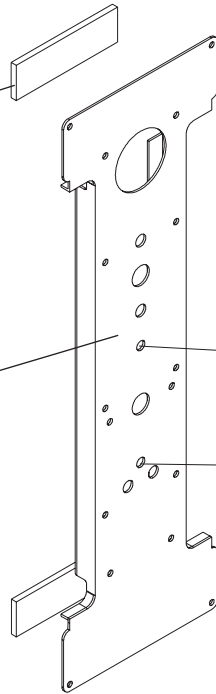


Lock backup plate
(8300/8500 & wood)
#128564

Phillips head machine screws

- (2) 1" (9100) #306564
- (2) 1-1/4" (9600 & wood)#306565
- (2) 1-1/2" (9900) #306566

All 8000 Series Doors, See Step 4.

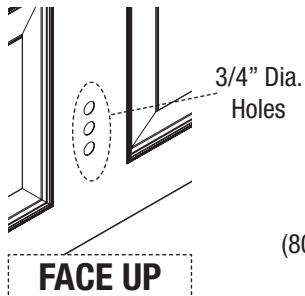

Center stile
(8000/8100 & 8200)

(2) Pre-punched holes

NOTE: if pre-punched holes in center stile are 3/4" dia., use the escutcheon fasteners. If the holes are 3/16" dia., use the center stile as a guide to drill 1/8" pilot holes completely through the section. Flip the section over (face up) and enlarge holes to 3/4" dia. Pay close attention not to drill completely through section into center stile.

NOTE: If holes are 3/16" dia., use phillips head machine screws (2) 1-3/4" (8000) #306567

FACE DOWN