

All Window Factory Installed Struts Instructions




Supplemental Instruction Insert

This supplemental installation instruction is to be used as a supplement to the main Installation Instruction and Owner's Manual provided with the door. The instructions included in this document are only those which deviate from the standard installation. All warnings and cautions listed in the main manual are applicable to this supplemental instruction as well.

www.Wayne-Dalton.com

IMPORTANT INSTRUCTIONS

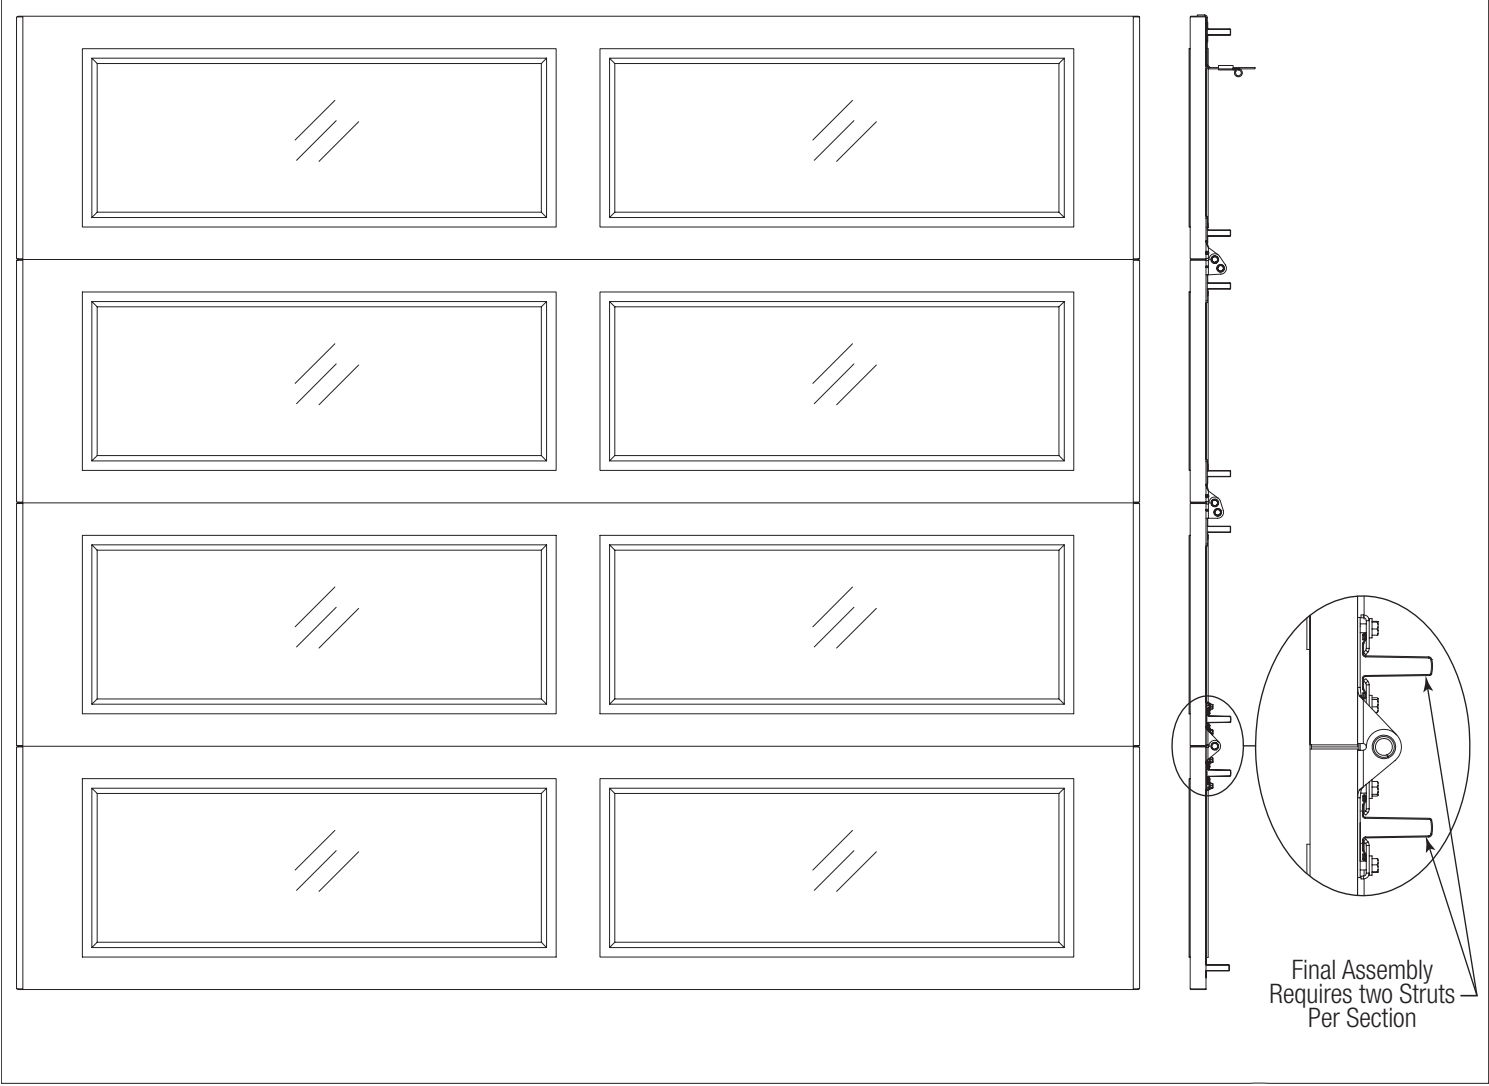

TWO STRUTS HAVE BEEN INSTALLED ON EACH SECTION AT THE FACTORY. FACTORY INSTALLED STRUTS ARE UTILIZED TO SUPPORT THE SECTIONS DURING SHIPPING AND ALSO FOR HANDLING DURING ASSEMBLY. THE LOCATION OF THE STRUTS ARE TEMPORARY AND MOST WILL NEED TO BE RELOCATED. STRUTS AT THE TOP AND AT THE BOTTOM OF THE DOOR MAY NOT NEED TO BE REMOVED. BOTH STRUTS ARE TO BE PERMANENTLY FASTENED TO THE DOOR DURING INSTALLATION. A MINIMUM QUANTITY OF FASTENERS ARE INSTALLED TO HOLD THE STRUT IN PLACE DURING SHIPPING. ADDITIONAL FASTENERS ARE PROVIDED IN THE HARDWARE BOX. THESE ADDITIONAL FASTENERS MUST BE INSTALLED TO THE STRUT WHEN THE STRUTS ARE PERMANENTLY ATTACHED TO THE SECTION. REFERENCE STEP "ATTACHING HINGES AND STRUTS" IN THE INSTALLATION MANUAL TO DETERMINE THE PLACEMENT OF STRUT(S) FOR YOUR DOOR.