

# IMPORTANT BEFORE YOU START

**PLEASE READ THESE INSTALLATION TIPS  
TO AVOID UNNECESSARY SERVICE CALLS**




The standard Push Button or the Deluxe Wall Station must be the only type used for proper door operation. The use of an illuminated Push Button or Wall Control Station, not supplied by Wayne-Dalton, **will cause a malfunction.**



The Driver Gear in the Motor Head **must be properly aligned** with the Sprocket Coupling in the Motor Head Rail Assembly and the mounting bolts fully tightened, before powering the opener. **Neglecting to do this will result in gear failure.**



Confirm that the trolley has stopped in the "UP" position as a result of the Upper Limit Switch and not because the Trolley has hit the open Stop Bolt which is mounted in the Rail near the Motor Head Assembly. The correct condition is easily verified by observing that the opener's Convenience Light **does not flash** after the door comes to a stop in the fully open position. The faulty condition may also be confirmed visually by checking to see if the rear of the Trolley is resting up against the Stop Bolt in the Rail.

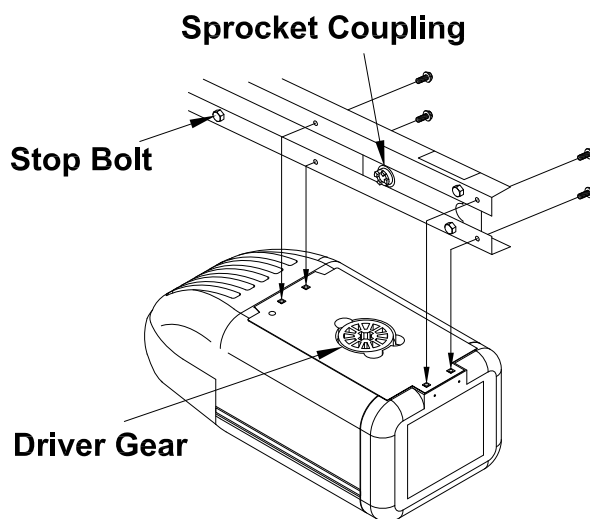

**Wayne-Dalton Corp.  
Telephone 1-888-827-3667**

284778